

Installation Instructions

Part Numbers:

Nissan Murano

75647

44600


87486

78282 UHAUL

Will not fit with optional Aero kit

**Do Not Exceed Lower of Towing Vehicle
Manufacturer's Rating or**

Hitch type	Max Gross Trailer WT (LB)	Max Tongue WT (LB)
Weight Distributing	Warning: Do NOT use with Spring Bars	
Weight Carrying Ball Mount	4000 (1816 Kg.)	400 (182 Kg.)

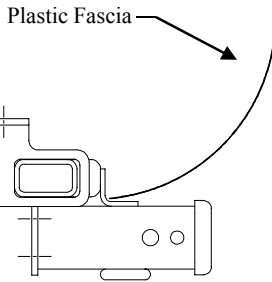

Hitch Shown In Proper Position


Equipment Required: Small Screwdriver

Fastener Kit: 75647F

Wrenches: 10mm, 16mm, 17mm, 19mm

Drill Bits: None

Wiring Access Location: SUV3, SUV4

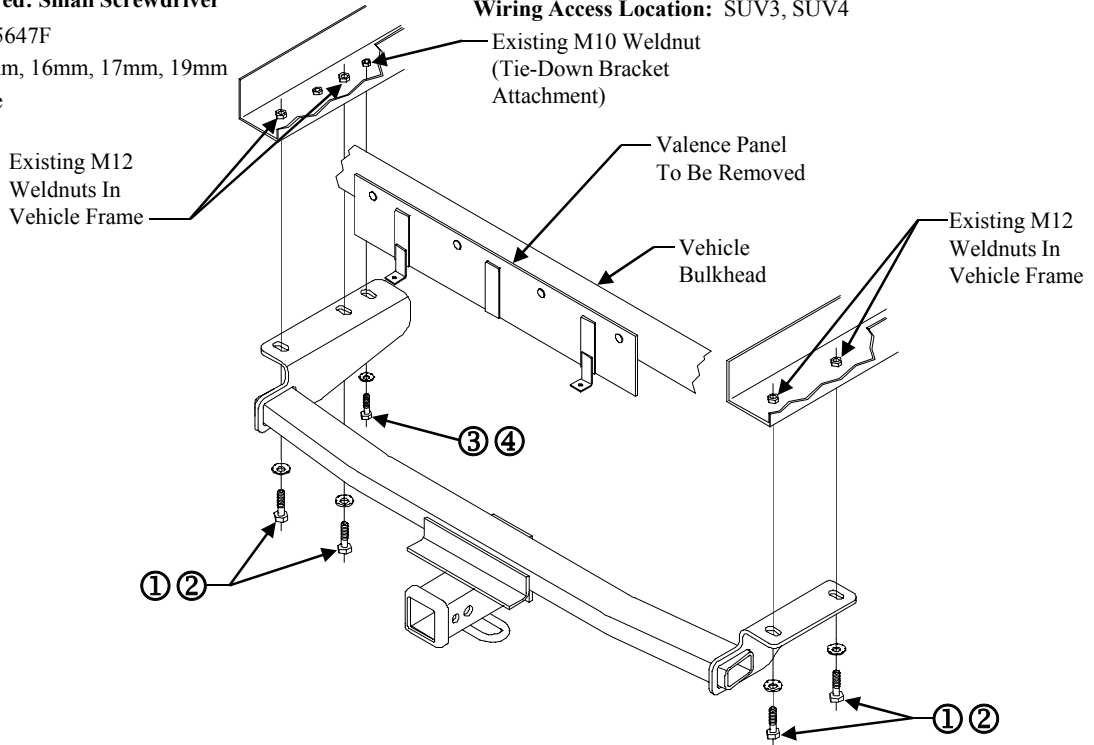

①	Qty. (4)	Hex Bolt M12 x 1.25 x 30mm CL8.8	④	Qty. (1)	Conical Washer – 3/8"
②	Qty. (4)	Conical Washer – 1/2"	⑤	Qty. (2)	Cable Tie
③	Qty. (1)	Hex Bolt M10 x 1.25 x 30mm CL8.8			

- Lower exhaust by removing (3) rubber exhaust hangers from hanger mounting brackets, (2) on driver's side, (1) on passenger's side.
- Remove tie-down bracket from driver's side frame rail. Return tie-down bracket and fasteners to vehicle owner.
- Disconnect fascia from valence panel by removing (2) plastic fascia push pins. Return push pins to vehicle owner.
- Remove valence panel from vehicle bulkhead by removing (4) hex nuts. Return valence panel and nuts to vehicle owner.
- Raise hitch into position by carefully pulling fascia down to allow clearance for hitch side brackets. Secure with conical washers and M12 hex bolts into existing weldnuts as shown above.
- Raise exhaust back into position and re-attach exhaust hangers.
- Use cable ties to secure plastic fascia to hitch cross-tube.

Cequent



Tighten all M12 CL8.8 fasteners with torque wrench to 76 Lb.-Ft. (103 N*M)

Tighten all M10 CL8.8 fasteners with torque wrench to 42 Lb.-Ft. (57 N*M)